


T-486 Operation and Maintenance Manual

1 · T-486 Temperature Controller Panel

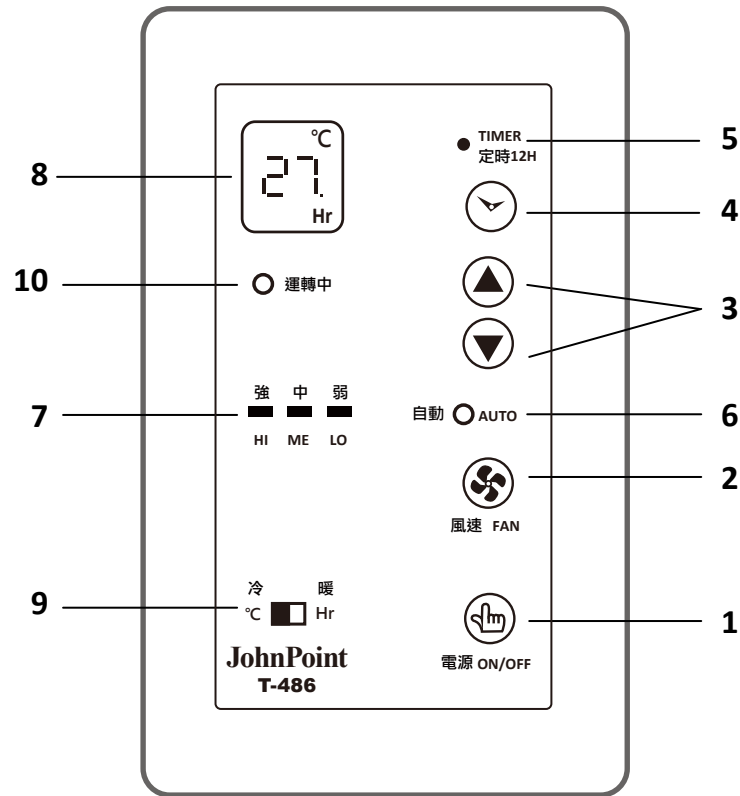

2 · T-486 Maintenance Instructions

- Do not install the control box on drain pans or in wet/humid locations.
- Install the control box near service access openings.
- Mount the operation panel in an open area :
 - Avoid direct sunlight exposure
 - Do not obstruct the temperature sensor (located below panel) with objects (e.g. paintings, calendars, cabinets)
- Do not tamper with internal adjustment keys.
- This precision electronic controller requires no special maintenance (stable quality).
- Audible beep confirms successful command execution.

3 · T-486 Control Panel Key Functions

Code	Name	Function Description	Operating Instructions
1	Power Switch	Turn power ON or OFF	<ul style="list-style-type: none"> Press to activate when unit is off Press to stop during operation
2	Fan Speed Selector	Selects 3-speed levels (High/Medium/Low/Auto)	Cycles through : Auto → High → Medium → Low with each press
3	Temperature Setting Key	Sets temperature (16°C-32°C)	Press ▲ to increase or ▼ to decrease setting Display flashes ~10 times then shows room temperature
4	Timer Setting Key	Programs ON/OFF timer (1-12 hours)	<ul style="list-style-type: none"> Timer ON : <ol style="list-style-type: none"> Power off Press Timer key Indicator lights Set hours until startup Timer OFF: <ol style="list-style-type: none"> During operation Press Timer key Indicator lights Set hours until shutdown
5	Auto Fan Speed Indicator Key	Activates timer function	
6	Auto Fan Speed Indicator	Shows automatic airflow control status	Lights up when auto mode active Automatically adjusts High / Medium / Low based on ΔT (set vs. room temp)
7	Wind speed indicator	Indicates that the current air volume is strong, medium, or weak.	
8	Digital Display	Indicate the indoor temperature, set the temperature, and display it regularly	According to the key function, the number of each function will be displayed.
9	Mode Selection Switch	Selects cooling or heating mode	Requires chilled water (cooling) or hot water (heating) supply to fan coil unit for proper operation.
10	Operation Indicator	3-way valve operation status indicator	<ul style="list-style-type: none"> Timer ON setting : Program when unit is off Timer OFF setting : Program during cooling operation

